

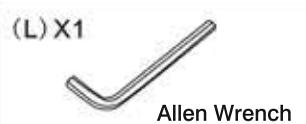
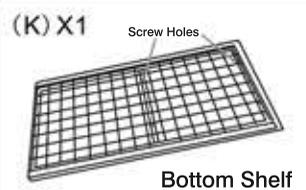
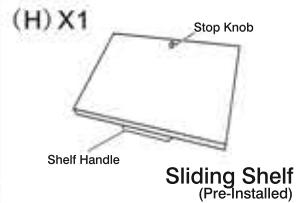
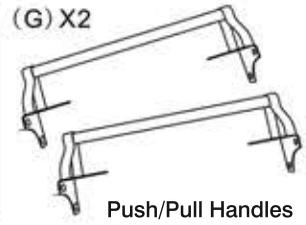
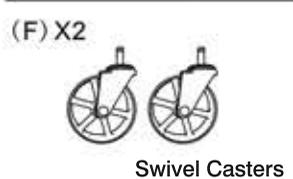
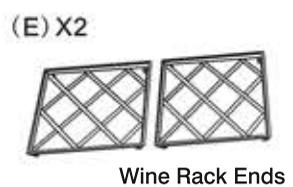
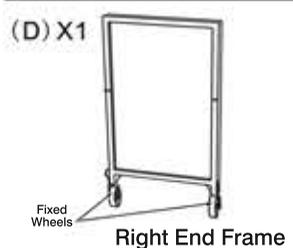
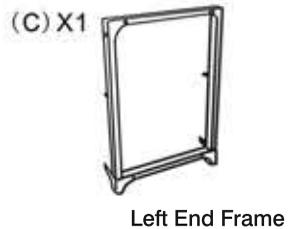


Rustic Kitchen Cart Assembly Instructions

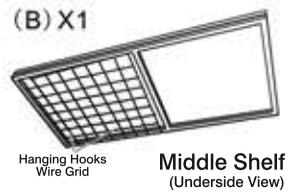


NOTE: Assembly may require additional tools (rubber mallet, clamps and two people).

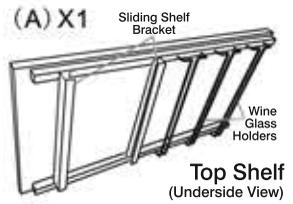

Note: Loosely tighten fasteners initially during assembly to allow for easier hole/fastener alignment. When fully assembled, tighten all fasteners. Use Allen wrench (L) provided to fasten all machine screws. May require two people.


1. Carefully open carton, remove contents and unwrap all parts. Be careful not to drop any wood parts on corners.

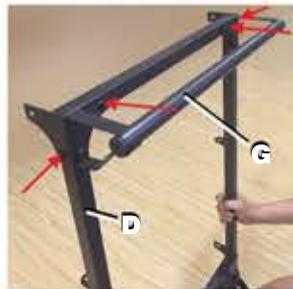


2. Attach handle (G) to end frame (D) using 4 ea. 12mm machine screws (I). Repeat step attaching handle (G) to end frame (C) using 4 each machine screws (I).




3. Put down floor protection and place top (A) on floor, stemware rails and drawer up.

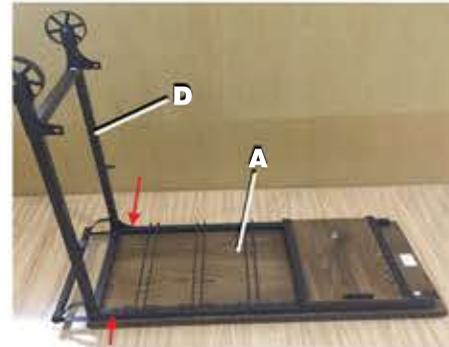


4. Attach right end frame (D) to top (A) as shown using 2 each 12mm machine screws (I) from each side.

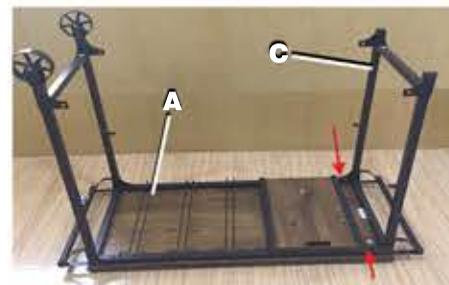


5. Attach left end frame (C) to top (A) as shown using 2 each 12mm machine screws (I) from each side.

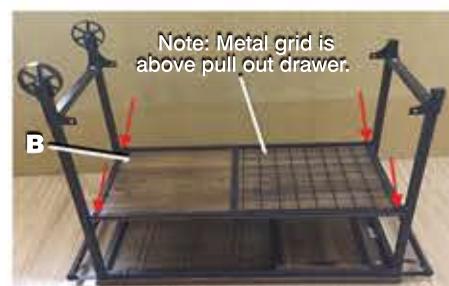

6. Place middle shelf (B) below middle tabs and attach using 4 each 12 mm machine screws (I) as shown.

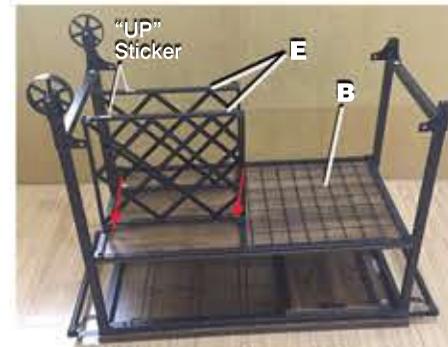

7. Attach one wine rack panel (E), with tabs out, to shelf (B) using 2 each 20mm machine screws (J). Note: Sticker "UP" should be visible as shown. Repeat for second wine rack panel.

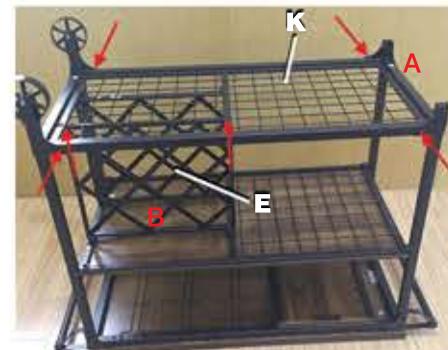

8. A. Place bottom shelf (K) below bottom tabs and attach using 4 each 12mm machine screws (I) as shown. B. Attach bottom of wine rack panels (E) to bottom shelf using 4 each 20mm machine screws (J) from underside. Note: Wine rack tabs should align with fasteners on shelf as indicated.



9. Insert 2 each casters (F) into end panel (C) as shown.



10. Using two people, turn cart to upright position and tighten all machine screws.



11. Position accessory hook on underside of middle shelf as desired.